

## HD-1 XPansion Sounds—Vol. 2

This set of Programs is the complement to HD-1 XPansion Sounds—Vol. 1. It's comprised of two self-contained banks, for a total of 256 new sounds including:

- lush, expressive orchestral ensembles with combinations of brass, woodwinds, and strings
- new acoustic guitars, and electric & acoustic basses
- electric guitars with vintage amp models and tailored effects
- over a hundred classic synth sounds, including basses, pads, leads, stabs, and more

### Some Programs require EXs1

Some of these Programs use Multisamples from EXs1; if EXs1 is not loaded, they will not sound properly. All such Programs include "EXs1" in their names.

### Drum Programs require the factory drum kits

The second bank, HD1\_XP4.PCG, includes a few Drum Programs. These use the internal bank of factory drum kits; if different drum kits are loaded, the Drum Programs may not sound properly.

---

## Transferring the sounds from your computer

After downloading the sounds:

### 1. Un-zip the downloaded file.

The zip archive contains the HD1\_XP3.PCG and HD1\_XP4.PCG files, and these instructions.

2. **Save the two .PCG files to a USB hard drive, flash media, or an ISO9660 CD-R/RW disk.**
3. **Connect the USB storage device to the OASYS, or insert the CD-R/RW disk into the OASYS drive.**
4. **If you're using a USB storage device, go to the DISK mode Media Information page, and use the Scan Device menu command.**
5. **Go to the Disk Utility page, and use the Copy menu command to copy the two .PCG files to the OASYS internal hard disk.**

---

## Loading the sounds into internal memory

Each PCG file contains a single bank of Programs, which by default will load into USER-G. You can also load them into other banks, if you prefer, by following the instructions below.

### Loading the sounds into the default bank (USER-G)

To load the sounds into the default bank:

1. **Go to the Disk Load page.**
2. **Select the desired .PCG file—either HD1\_XP3.PCG or HD1\_XP4.PCG.**
3. **Press the Load button.**

A dialog box appears.

4. **Leave the .PCG Contents menu set to All.**
5. **Press OK.**

The sounds will be loaded into Program bank USER-G.

### Loading the sounds into different banks

You can also load the Programs into any HD-1-capable bank (INT-A through INT-E, or USER-A through USER-G). To do so, use the **Open** button on the **Disk Load** page to tunnel down into the .PCG file until you see the individual bank, and then load it as desired.

# List of Programs

## HD1\_XP3.PCG

Number	Program Name
G000	Tron Flute
G001	2 Vib Flute Ensemble
G002	Pan Wind Flute
G003	Airy Shakuhachi
G004	Flute/Clarinet Ensemble
G005	Flute/Horn Ensemble
G006	Flute/Horn/String Ens.
G007	Flute & Oboe
G008	Troubadour Orch
G009	Gentle Slow Ensemble
G010	Slow W.Winds & Horn
G011	Wood Ensemble
G012	Velo Woodwinds Arranger
G013	Baroque WoodWinds
G014	Sax Section SW1
G015	Unplugged Organ
G016	Classical Nylon
G017	Nylon Performer Guitar
G018	Nylon Guitar mf
G019	Studio Classic Guitar
G020	Rose Nylon Guitar
G021	Spanish Guitar
G022	Nylon Guitar Layer
G023	A.Guitar Dynamic Picking
G024	Soft Steel A.Guitar
G025	Wide Steel A.Guitar Dyn
G026	Steel Mute Guitar
G027	Steel Guitar Layer
G028	Steel A.Guitar Syn Pad
G029	Jazz Guitar Mellow
G030	Semi-Hollow Body
G031	Dyna Clean Guitar
G032	Hybrid E.Guitar
G033	Telly E.Guitar Comp
G034	Stereo Clean E.Guitar
G035	Twin Telly E.Guitar
G036	Sixties Twang E.Guitar
G037	Slow Rotary E.Guitar +Y
G038	Strat Swell Pad
G039	Funkaholic Mute E.Guitar
G040	Funkadillo Mute E.Guitar
G041	Funk Mute E.Guitar SW2
G042	LA Velo Mute/Open
G043	Tremolo-matic
G044	Thick Tremolo Guitar
G045	Dark Ballad Guitar
G046	Blues Elec Guitar
G047	Blues Tweed
G048	Rhythm n Blues Guitar
G049	Roadhouse Blues
G050	Brit Guitar
G051	Elec Guitar + Tweed
G052	Elec Guitar + Tubeman
G053	Austin Guy
G054	Talking Mod E.Guitar
G055	Ampy Driven E.Guitar
G056	OD Rock Guitar
G057	Crunch Lead Guitar
G058	Boutique Lead Guitar
G059	Captain Speedfingers Gtr
G060	New Fuzz Guitar Velo
G061	Royal Tone E.Guitar
G062	Vintage Rock Stack E.Gtr
G063	Wah Metal SW1
G064	Greenback Lead Guitar

Number	Program Name
G065	Distorted Guitar Lead 1
G066	Distorted Guitar Lead 2
G067	Power METAL
G068	Emo Velo Powerchord EXs1
G069	Double Power Chord
G070	Picasso Pluck 1
G071	Picasso Pluck 2
G072	Alexandria EXs1
G073	Quiet Place EXs1
G074	Middle East Pluck
G075	Dream Harp
G076	Elephant Sub Bass
G077	Plump House Bass
G078	Vari-Syn Bass
G079	Push Up Bass
G080	Resonant Attack Bass
G081	DEEP SynBass
G082	Mojuba Bass
G083	Secret Rez Bass
G084	Blue Acid Bass
G085	Tek Square Bass
G086	Cyber Kick Bass
G087	Phat Saw Bass
G088	Saw Synth Bass
G089	Noisy Synth Bass
G090	Boost Pedal Bass
G091	Pulsing Bass
G092	Comp Synth Bass
G093	Dynamic Synth Bass
G094	Manticore Bass
G095	Electro Big Bass
G096	Magnum Bass
G097	MG Funk Bass
G098	Techtone Bass EXs1
G099	VS Pluck with Wow
G100	Ef Em Bass
G101	Plucked Acoustic Bass
G102	Bright Acoustic Bass
G103	Mono Club Jazz Bass
G104	Digi Acoustic Bass
G105	Solid Finger Bass
G106	Finger Comp Bass
G107	Fat Finger Bass
G108	Picking Elec Bass
G109	Picked Velocity Mute
G110	Grunge Bass
G111	Octaver Drive Bass
G112	Distorted Bass
G113	Gnarly Rock Bass
G114	Fretless Chorus Bass
G115	Warm Fretless
G116	Dual E. Bass Mix
G117	Mono Dyna Slap Bass 1
G118	Mono Dyna Slap Bass 2
G119	Rezzzy Oct Slap
G120	Mono Wah Slap Bass
G121	Slow Flange Pad
G122	Modern Sol Strings
G123	Ethereal Pad
G124	Hybrid Synth Orch Brass
G125	Brass Choir Pad
G126	Liquid Squares
G127	Ghost Organ

**HD1\_XP4.PCG**

Number	Program Name
G000	Wet Sombra Lead & Pad
G001	Super Analog Pad
G002	The Northwest Passage
G003	Gentle Syn Strings
G004	Warm & Slow Pad
G005	Silent Pad
G006	Envelope Pad
G007	Sea Ice Pad
G008	Dark Phaser Pad
G009	Voxy Pad
G010	Dark Smoothie Pad
G011	Sweep Orchestra Pad
G012	Oddy-say Pad
G013	BPF Sweep Pad
G014	Formant Pad
G015	Electro Stab
G016	Turnback Poly Comp
G017	Filtered Syn Brass
G018	Saw Synth Brass
G019	Phase Synth Brass
G020	Solid Syn BRASS
G021	Jedd Clamp-it
G022	High Pass Synth Brass 1
G023	High Pass Synth Brass 2
G024	Master Synth Brass
G025	Solid Analog
G026	Synth 1984
G027	Harpsibrass
G028	Analog Soft Brass
G029	Muffler
G030	Poly Six in the City
G031	Smooth Touch
G032	Retro Analog Comp
G033	Polytti Comp
G034	Vocoder VC-10
G035	Separate Ways
G036	80's Synth Brass Pad
G037	Analog Ensemble
G038	Danger Web
G039	Sky Diamond
G040	Dream Wave 1
G041	Dream Wave 2
G042	It's Play w/ Delay Day!
G043	Trancy Pizz Shot
G044	Soft Synth
G045	Noise Pad
G046	Long Crystal
G047	Hard Squeeze
G048	High Pass Synth Solo
G049	Cutting Rez Lead
G050	PortoPulse Lead
G051	80's Analead
G052	Envo-Rez Lead
G053	Surfin PWM Lead
G054	Bright Mini
G055	Vintage Odd-A-See
G056	Vintage Progressive Lead
G057	Synth Horn
G058	Crossover Lead
G059	Siberia
G060	Vintage Lead 1
G061	Vintage Lead 2
G062	Wired Touch Lead
G063	Unison Sync Lead

Number	Program Name
G064	Sync'd Lead
G065	Ryde'n Lead
G066	Square Mini
G067	Dyna PULSE
G068	Classic Analog Lead
G069	Unlucky Woman
G070	Lucky Lead
G071	Unison 5th Saw
G072	5th Saw Lead
G073	Syn.Harmonica SW1 Phaser
G074	Vintage Sine Lead
G075	4am Lead Synth
G076	Swirling Lead
G077	Sweep Detune Lead
G078	Squelchy Lead
G079	Rap Squeeze 1
G080	Rap Squeeze 2
G081	MG SawLead
G082	PMGR Lead
G083	Deep Soul Lead
G084	Vintage Lead Mild Square
G085	Laid Maze
G086	Maze Square Lead
G087	Soft Unison Lead
G088	Tundra
G089	Aurora
G090	Tekno Pop Lead
G091	Octave Sines
G092	Phaze Radiator
G093	Tubular Lead
G094	Syn Clarinet
G095	Syn PanFlute Lead
G096	Whispering Sines
G097	Twinkle Pad
G098	Motion Pad 1
G099	Motion Pad 2
G100	Kaleidoscope
G101	Fluty Breath Pad
G102	Apollo Pad
G103	Time Lag Piano
G104	Manual Lore
G105	Sahara
G106	The Golden Mile
G107	Bird Melody
G108	LOST World
G109	Fallin' Down
G110	World End
G111	Martian Ocean Joystick
G112	From the Dark Side
G113	Alien Dance
G114	Signals From Space
G115	Baltan Alien
G116	Space Dust JS
G117	S&H Sync Shot
G118	Popcorn Hit
G119	Syn Mallet
G120	Anattack SW2
G121	Dyna Hits
G122	Double Hits EXs1
G123	Gated Funk Kit
G124	Instant Loop (SW1=Loop)
G125	Low bit Kit
G126	Cymbal Roll SW1
G127	Samba Perc. Kit